

## Drain the carburetor float

Follow the steps below to drain the carburetor float bowl.

1. Take off the engine access panel and locate the carburetor drain screw on your inverter.



Location of screw on  
2200-2500 inverters



Location of screw on  
4500 inverters

2. Take the rubber hose coming out of the bottom of the carburetor and place in a suitable container.

3. Take a flat head screwdriver and loosen the screw under the carburetor. Make sure not to remove the screw completely.



Loosen with flat  
screw driver

4. Once fuel stops draining. Tighten screw with flat screw driver.