



Westinghouse

PARALLEL POWER CORD

FOR USE WITH YOUR WESTINGHOUSE INVERTER GENERATORS ONLY

WARNING

- The plugs on the paralleling cord will illuminate when voltage is present.
- **ALWAYS** turn both switches to the off position when you are done using the paralleling cord.
- **DO NOT** use this paralleling cord with other inverters.
- **DO NOT** use this paralleling cord for anything other than paralleling two Westinghouse inverters.
- Both inverters must be floating neutral for proper operation.

OPERATION INSTRUCTIONS

1. Connect both ground lugs on the inverters together with 14 gauge wire.
2. Before plugging the cord into the inverter, turn both switches to the off position.
3. Plug the paralleling cord into both of the inverters.
4. Start one inverter and allow it to stabilize and wait for the ready light to illuminate.
5. Turn both switches on the cord to the on position.
6. Start the second inverter, when the ready light is lit you will have both inverters paralleled.
7. Remove the receptacle cover from the receptacles and connect your appliance.
8. Reverse the process when shutting down the inverters.

Model: WHPC